

The following instructions show how to install servo motor.

A63

A64

A65

A66

A67

A68

A69

A70

A71

这部分是前转向伺服假电机，换真伺服电机的话，可以忽略不拼

31

7 1:1

3 1:1

32

Install the servo in step A72 as shown below.

